


CSL Steering Wheel GT3




PACKAGE CONTENT

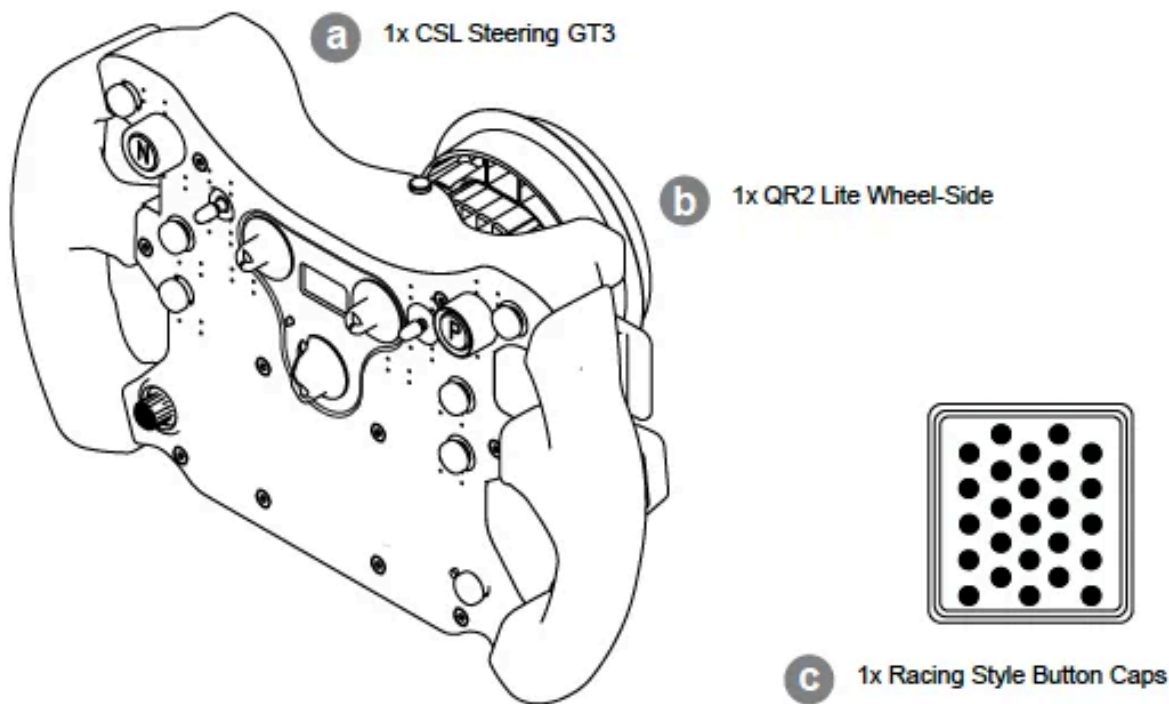

1x CSL Steering Wheel GT3
 1x QR2 Lite Wheel-Side
 1x Racing Style Button Caps


FIRMWARE UPDATE

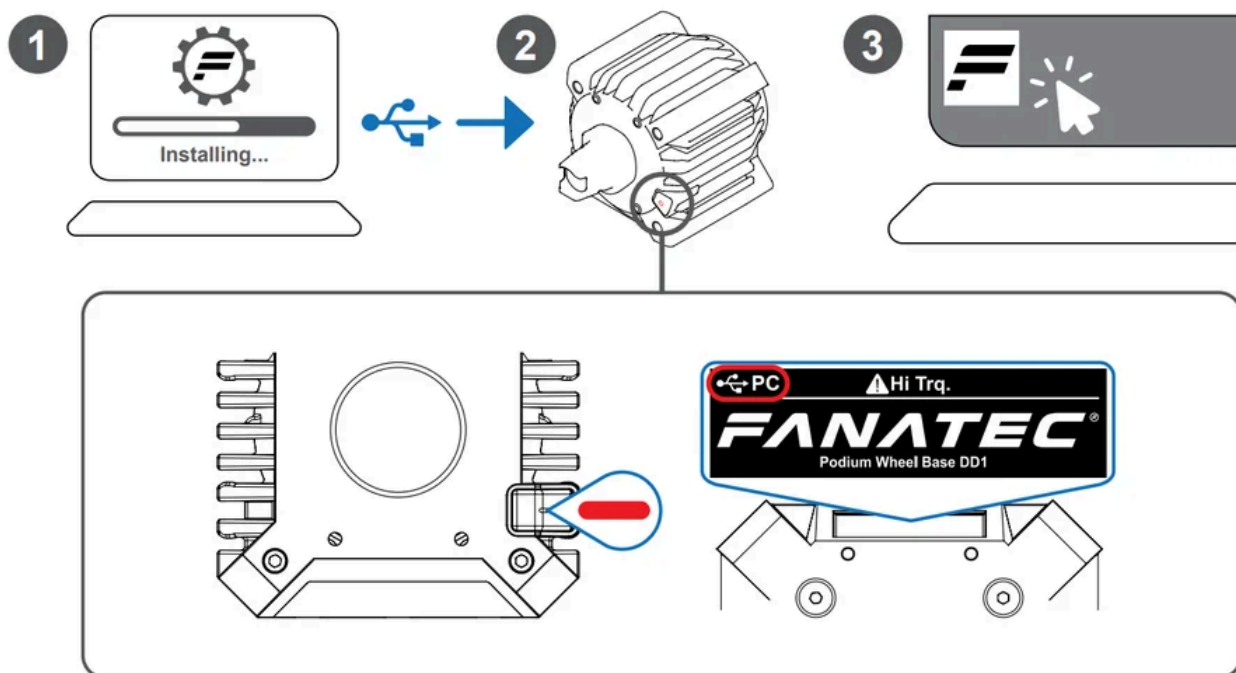

1 - Download and install the latest Fanatec driver (
<https://www.fanatec.com/s/download-apps-driver>)


2 - Connect your wheel base to PC via USB; make yure your wheel base is in PC mode

3 - Open the Fanatec Control Panel

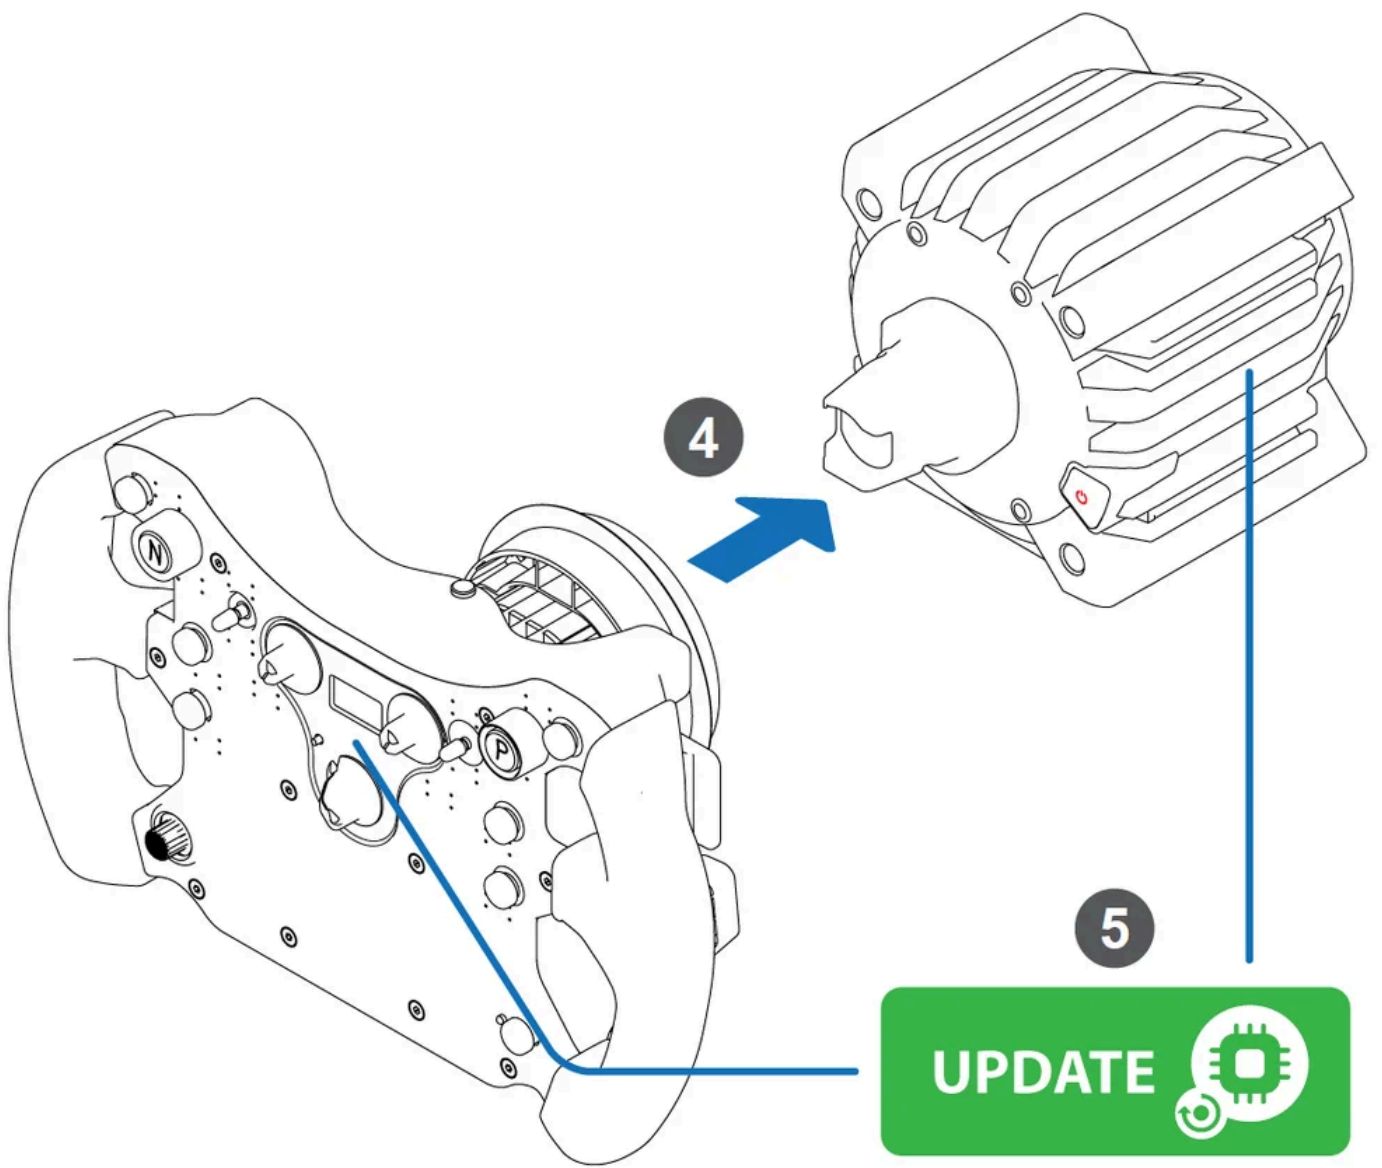

Connect your steering wheel to the wheel base

CENTRE CALIBRATION

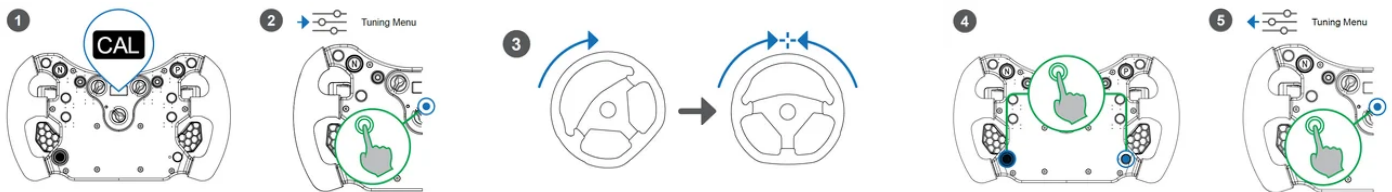


Press the button as shown

The calibration will start


Press the button as shown

MODES

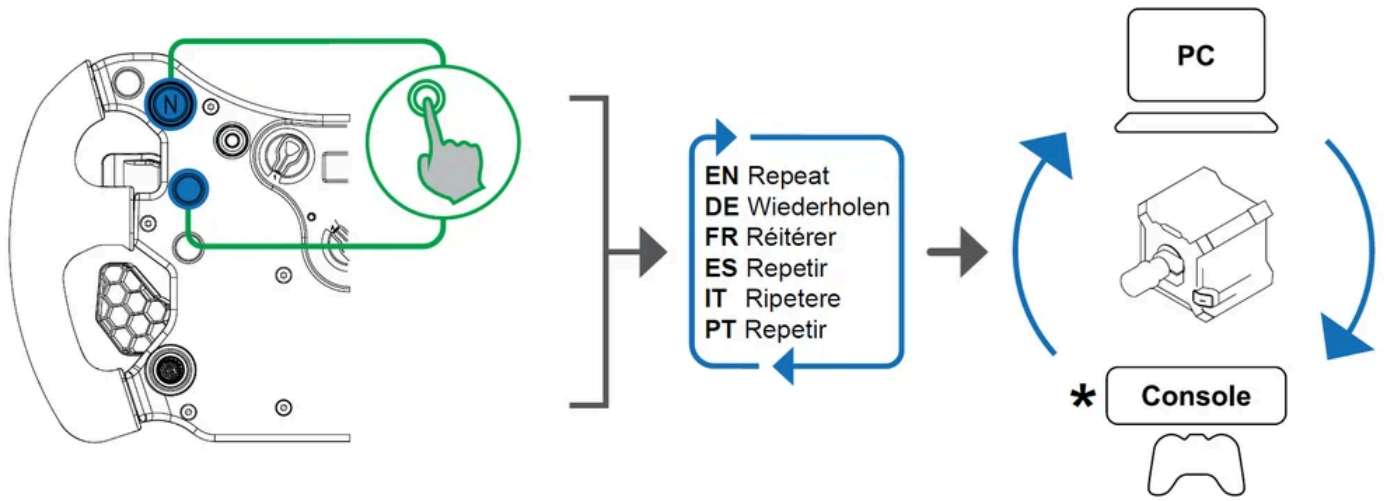

Repeat
 *Console (wheel base-dependent)


TUNING OPTIONS

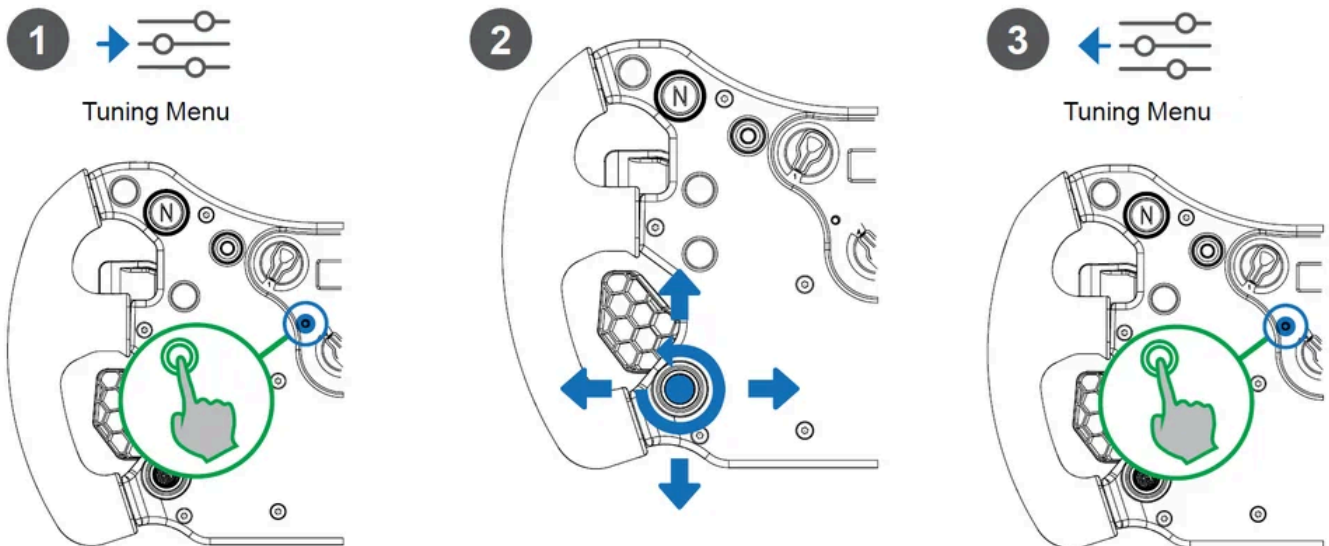

- 1 - Enter the Tuning Menu
- 2 - Navigate the Tuning Menu parameters using the D-Pad (FunkySwitch)
- 3 - Exit the Tuning Menu


SHIFTER CALIBRATION

1

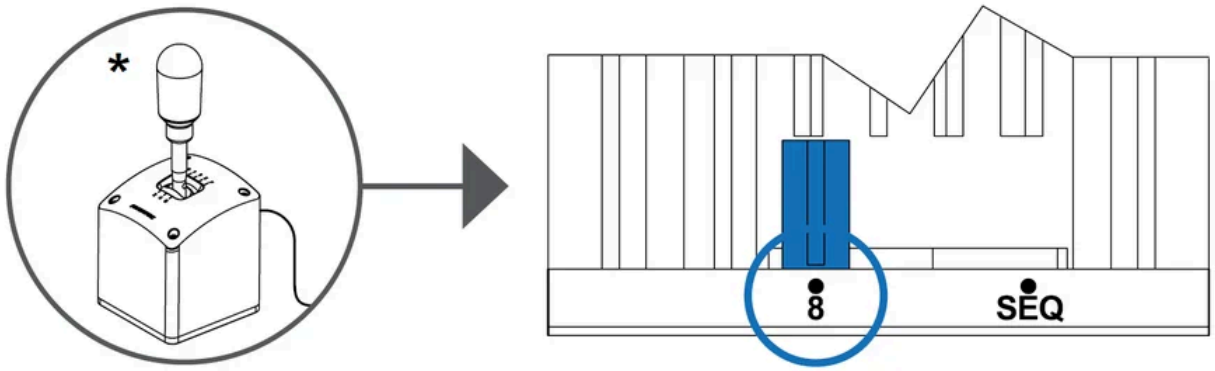

1 - Put your shifter* in H-pattern mode (*shifter sold separately)

2

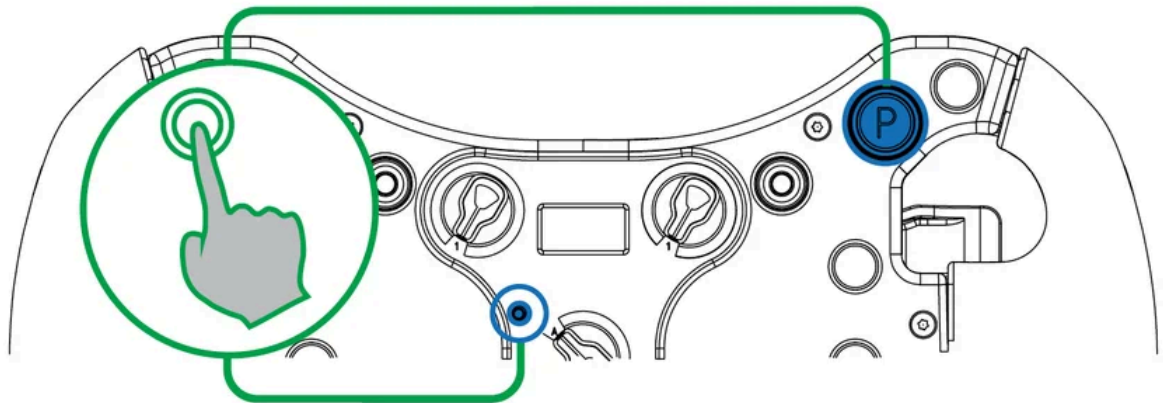


2 - Press the button combination as shown


3




4

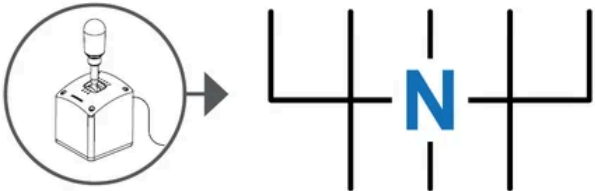

3 & 4 - Select gear N and press P

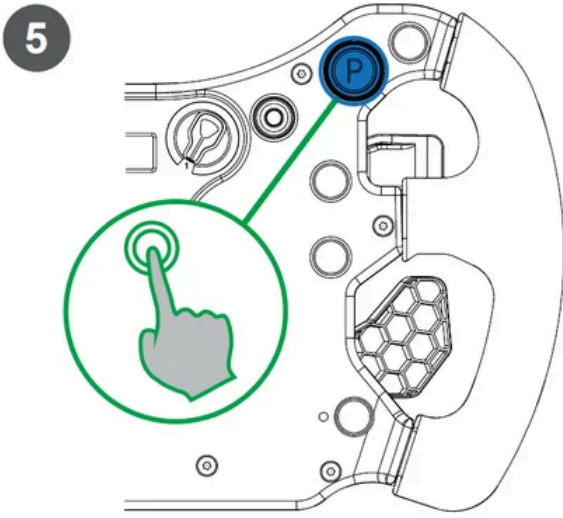




6

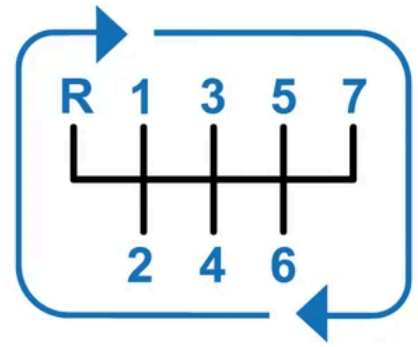


5 - Confirm gear with the button shown

6 - Repeat for all gears

BUTTON MAPPING
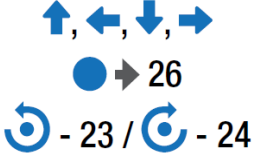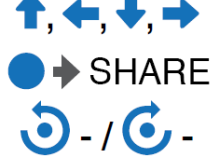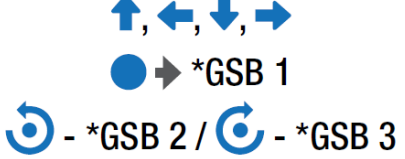
| # | PC | Xbox | PlayStation® |
|------------------|---|---|---|
| 1 | 12 | VIEW | L3 |
| 2 | 9 | *GSB | SHARE / CREATE |
| 3 | 4 | Y | Triangle |
| 4 | 1 | X | Square |
| 5 FunkySwitch |  |  |  |
| 6 | 11 | MENU | R3 |
| 7 | 10 | *GSB | OPTIONS |
| 8 | 3 | B | Circle |
| 9 | 2 | A | Cross |
| 10 | 25 | GUIDE | PS |
| 11 | 34 / 32 | LT / RT | *GSB 4 / *GSB 5 |
| 12 | 33 / 31 | LT / RT | *GSB 6 / *GSB 7 |
| 13 | 6 | LB | L1 |
| 14 | 5 | RB | R1 |
| 15 | Analogue Paddles: A = Clutch (Bite Point) Mode (S0) B = Handbrake + Clutch (S0 + S1) C = Brake + Throttle (RZ + Y) D = Mappable Analogue Axes (Left: RX / Right: RY) See Video Manual | | |
| 16 | | | |
| 17 | | | |
| 18 | ENC: 37 / 38, MPSPulse / Constant: 37 - 48 | | *GSB 8 / *GSB 9*GSB 8 - *GSB 19 |
| 19 | ENC: 49 / 50, MPSPulse / Constant: 49 - 60 | | *GSB 20 / *GSB 21*GSB 20 - *GSB 31 |

* GSB = Game Specific Button

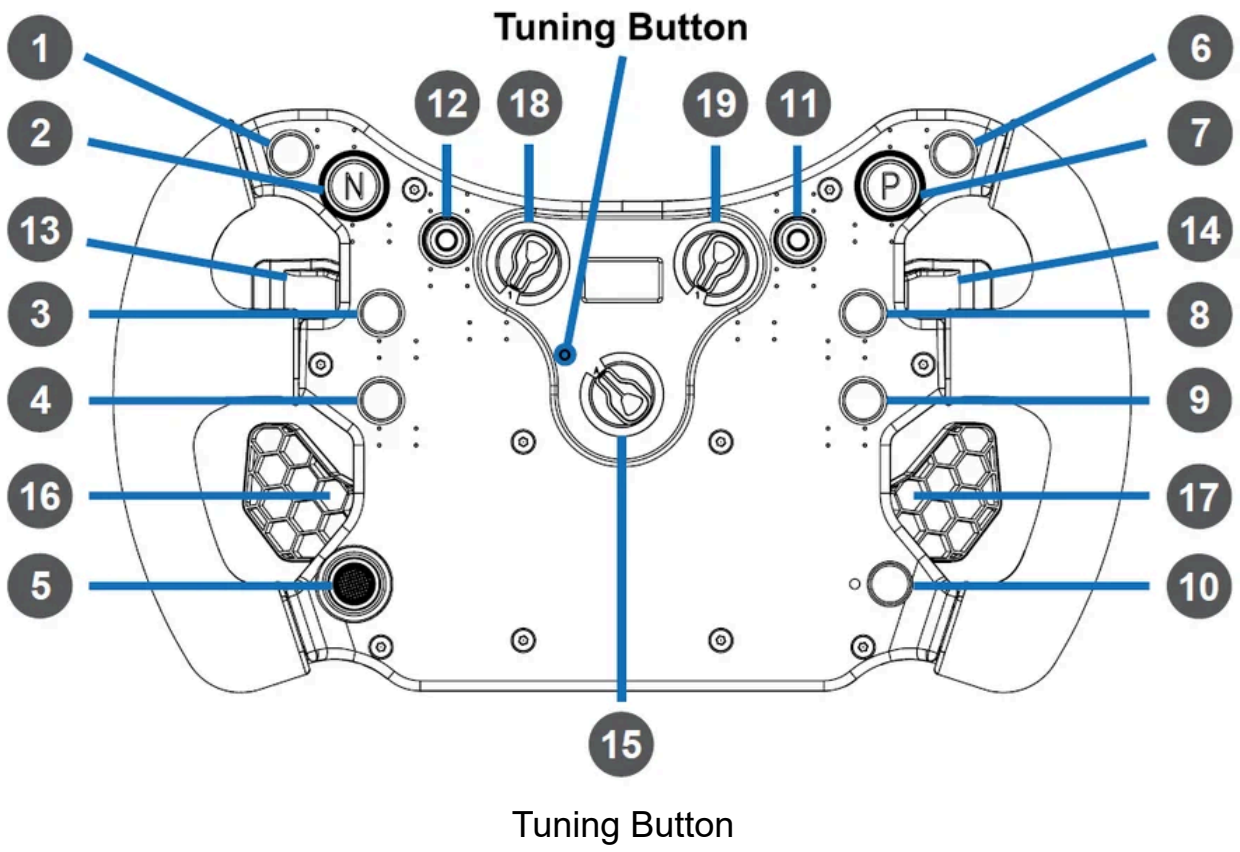

VIDEO GUIDE

SUPPORT

[Fanatec App and Driver Downloads](#)

[Support FAQs](#)